

INSTALLATION INSTRUCTION

PART# PW00382911

OE STYLE Running Board for MITSUBISHI OUTLANDER 12+

NOTICE:

- ≡ The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.
- ≡ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- ≡ Please periodically check and retighten all the hardware and clean the investment for a refresh look.


PARTS LIST:



ASSEMBLY PROCEDURE:

Step 1: Check all the contents are available in accordance with the above list.

Step 2: Remove the original side skirt.

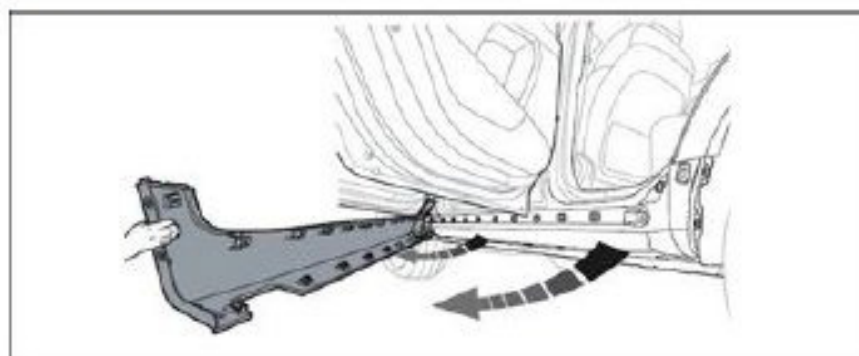

Step 3: Install the brackets with the large size T-bolt and nuts to the chassis; do not fully tighten all hardware this time.

Step 4: Install small size T-bolt to Mounting hole #3, middle size T-bolt to mounting holes #1 and #2, to tightly fix the bracket.



Step 5: Install the buckle in white color to the running board. And then install the running board to the fitted brackets, align and level them to proper position, and press it to make all the buckles fitted. Fasten all the hardware to finish installation.



DISCLAIMER: We are not responsible for any quality problems caused by improper installation and use.